



Due to magnetic properties, do not handle if you are wearing a Pacemaker
 Keep away from electronic devices and magnetic strips on credit cards
 Do not return this product to the store, please call Toll Free 1-855-339-AFER (2337) for return instructions




ECO-CLAMP® INSTALLATION INSTRUCTIONS

AFER Inc. would like to take this opportunity to thank you for your purchase of the Eco-Clamp®. PLEASE NOTE: If at anytime you have questions regarding the installation of the Eco-Clamp®, please call our Toll Free number for assistance - **1-855.339.AFER (2337)**




1. Locate incoming gas line and OPTIMAL EFFECTIVENESS AREA (Between **one** foot and no more than **seven** feet from the ignition chamber) on your furnace, hot water tank or pool heater.

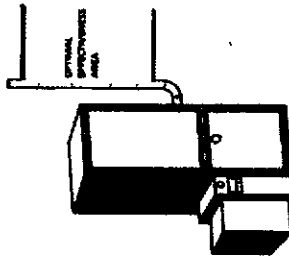


NOTE: DO NOT OPEN APPLIANCE CASING!

2. Determine pipe size. If the diameter is smaller than the 1/2" please apply the foam spacer to the gas line prior to applying the Eco-Clamp®.

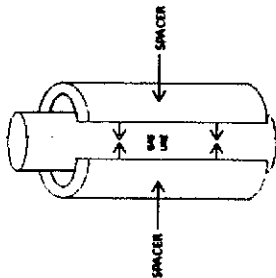

Remove tape from the inside of the spacer, wrap the foam spacer around the pipe and close together.

3. Place and hold the one-side of the Eco-Clamp® to your predetermined spot on the gas line. Line up the second side of the Eco-Clamp® insuring that both tabs are adjacent to both locking slots.

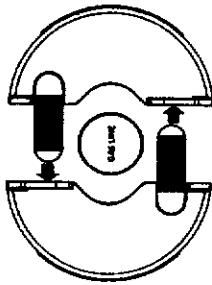

Apply even pressure to both sides of the Eco-Clamp® then push them together towards the center of the gas line. Make sure the Eco-Clamp® is snug to the gas line and will not slip down.

NOTE: TO RELEASE THE ECO-CLAMP® SYSTEM FROM YOUR GAS LINE, GENTLY PULL BACK ON THE LOCKING SLOTS